

BNL2i-WF-OUTDOOR

1. Open the sensor by unscrewing the four screws. Be careful when opening and closing the cover to avoid damaging the rubber seal.



2. The sensor has 4 mounting holes.

DO NOT break the IP67 seal by making new holes.



3. Ensure that the sensor is mounted according to the installation plan and the antennas (WF1 and WF2) are pointed in the right direction.



4. Connect (PoE) Ethernet-cable to the BlipNode.



5. Check the status indicator on the BlipNode 5 minutes after power on.



Left green LED
Steady:
Power OK

Flashing:
Power and OS OK

Right green LED
Flashing:
Searching for server

Steady:
Connected to server

6. It is important that the sensors serial number and antenna directions are noted according to the installation plan and forwarded to BLIP Systems support at support@blipsystems.com or +4598847202

6665

BNL2i-WF Outdoor Sensor

➔ **S/N: 20106665** Model: **BNL2i-WF-Outdoor**
 2015W31 Type: 30100310

Made in Denmark by Blip Systems A/S